

# User Guide



## **IMPORTANT SAFETY INSTRUCTIONS:**

- Please read User Guide before using this product.
- Please keep User Guide for future reference.
- Please read the cautions to prevent possible danger and loss of property.

## **FEATURES:**

- 178° Wide viewing angles.
- High resolution: 1280×800.
- High brightness: 400cd/m<sup>2</sup>.
- High contrast: 800:1.
- Faster response time.
- TALLY interface with indicating light.
- Firm & thin design.


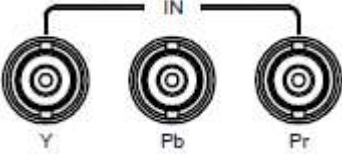
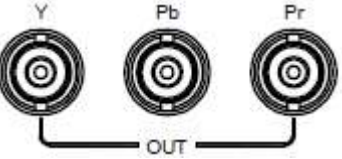







## **CAUTIONS:**

1. Please do not place the display screen towards the ground.
2. Please avoid heavy impact or drop onto the ground.
3. Please do NOT use chemical solutions to clean this product. Please wipe with a clean soft cloth to maintain the brightness of the surface.
4. Please do not block any vent hole.
5. Please follow the instructions and trouble-shootings to adjust the product. Other improper adjustment may result in damage. Any further adjustment must be performed or conducted by a qualified technician.
6. Please unplug the power if long-term no-use, or thunder weather.

# **Contents**
 
<b>1. PRODUCT DESCRIPTION.....</b>	<b>2</b>
<b>2. MENU SETTING.....</b>	<b>3</b>
<b>3. Software application .....</b>	<b>7</b>
<b>4. ACCESSORIES .....</b>	<b>8</b>
<b>5. PARAMETERS.....</b>	<b>8</b>
<b>6. TROUBLE SHOOTING.....</b>	<b>8</b>



3.  12V DC power input.
4.  Y Pb Pr YPbPr input.
5.  Y Pb Pr YPbPr output.
6.  IN VIDEO Video input.
7.  VIDEO OUT Video output.
8.  IN HDMI HDMI input.
9.  HDMI OUT HDMI output.
10.  IN SDI SDI input.
11.  OUT SDI SDI output.
12.  LAN IN The LAN port. (Connected to PC network interface for function adjustment.)

## 2. MENU SETTING

**Before setting the functions, please make sure the device is connected correctly.**

### 2-1. Shortcut buttons:


#### 2-1-1. the image menu

Power on, press “◀ / ▶” buttons on the device, brightness display bar will appear at the bottom of the screen, then press the MENU button to switch among brightness, sharpness, contrast, saturation, tint, MENU and Exit. User can adjust the parameters of the selected item with “◀ / ▶” buttons to meet their needs.

### 2-1-2. FN user-definable function button

Press FN button to pop up the default options, Use “◀ / ▶” buttons to adjust the value of selected item.

Long press FN button for 3-5 seconds to pop up shortcut menu directly. As shown in right Figure (default menu is displayed in white font).

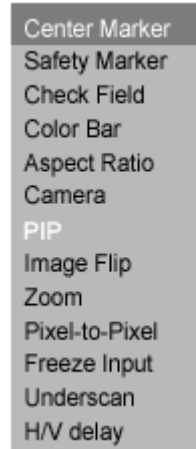

Use “◀ / ▶” buttons to select the desired item.

Finally, use the “ENTER” button to confirm the selected item as default.

Functions of FN button can be customized: Center Marker, Safety Marker, Check Field, Color Bar, Aspect Ratio, Camera, PIP, Image Flip, Zoom, Pixel-to-Pixel, Freeze Input, Underscan, H/V delay.

## 2-2. MENU Operation

Press “MENU” button on the device after power on. The menu used for setting function will display on the screen.

Press ◀/▶ buttons to select the sub-menu; then press ENTER to confirm it; after that, press MENU to return to main menu.

### 2-2-1. Picture




ITEMS	OPTIONS	
Brightness	0 - 100	
Contrast	0 - 100	
Saturation	0 – 100	
Tint	0 – 100	
Sharpness	0 – 100	
Color Temp	6500°K, 7500 °K, 9300 °K, User	
	Red	Note: Available only in “User” mode to choose the color value you need.
	Green	
	Blue	

### 2-2-2. Marker



ITEMS	OPTIONS
Center Marker	ON, OFF
Safety Marker	OFF, 95%, 93%, 90%, 88%, 85%, 80%

### 2-2-3. Display

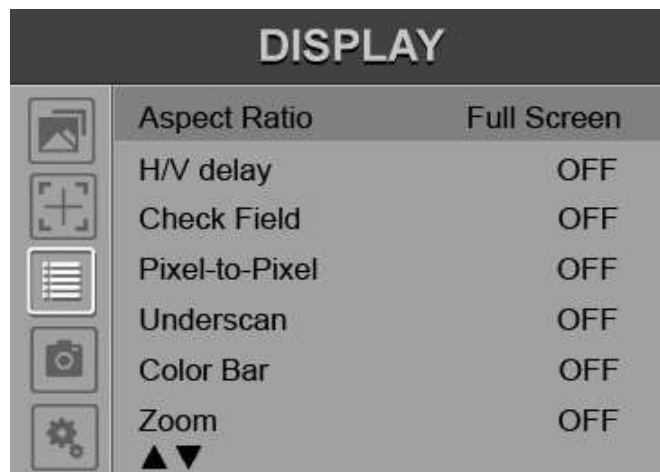


ITEMS	OPTIONS
Aspect Ratio	Full Screen, 16:9, 4:3, 1.85:1, 2.35:1
H / V delay	OFF, H&V Delay, V Delay, H Delay
Check Field	OFF, Mono, Red, Green, Blue
Pixel-to-Pixel	OFF, ON
Underscan	OFF, ON
Color Bar	OFF, ON
Zoom	OFF, x2, x4, x6, x8
Image Flip	OFF, ON
Freeze Input	OFF, Freeze
PIP	Small, Medium, Large, PBP, POP

## 2-2-4. DSLR Aux& Audio



ITEMS	OPTIONS
Camera	480P (5D-II Mode), 1080I (5D-III Mode)
Volume	0 – 100

## 2-2-5. System

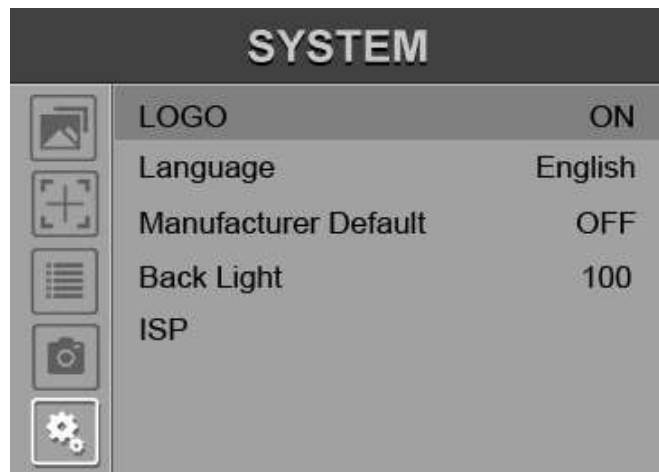

ITEMS	OPTIONS
LOGO	OFF, ON
Language	English, Chinese
Manufacturer Default	OFF, ON
Back Light	0 – 100
ISP	For program upgrades

### 3. Software application


#### 1. Cross-connection network cable



T568A								T568B							
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
W	G	W	Bl	W	O	W	Br	W	O	W	Bl	W	G	W	Br
G		O	Bl		Br			O	G	Bl					

Note: W: white, G: green, O: orange, Bl: blue, Br: brown

#### 2. Software settings

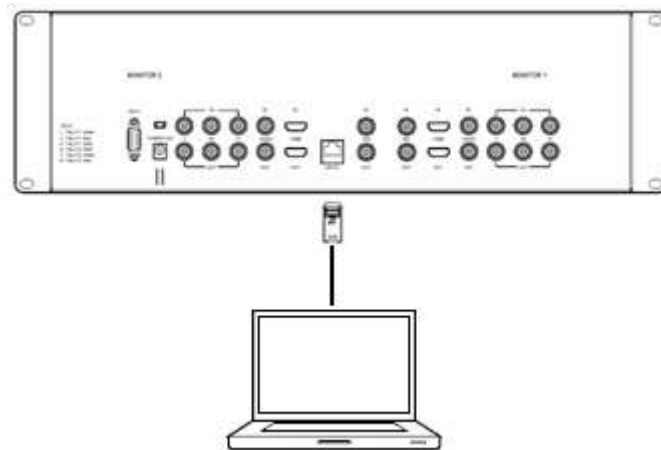

- ① Connect the LAN port with PC.
- ② Set the PC IP to 192.168.1.XXX network segment(XXX is a user-definable parameter).
- ③ Open the application program, then select the monitor which is needed to be adjusted (Monitor1 or Monitor2).
- ④ Set the parameter values according to user's individual requirements.

First, click the "read" button to read the corresponding parameter value of the device to the software, secondly, modify the parameter value on the software, then, the instruction can be realized on the device.





## 4. ACCESSORIES



1



2



3

- |                         |         |
|-------------------------|---------|
| 1. DC 12V Power adapter | 1 piece |
| 2. TALLY connector      | 1 piece |
| 3. Manual               | 1 piece |

## 5. PARAMETERS

Panel	7" LED IPS
Physical Resolution	1280x800
Brightness	400 cd/m <sup>2</sup>
Contrast	800: 1
Viewing Angle	178°/ 178°(H/V)
Input Voltage	DC 12V
Input Signal	HDMI, YPbPr, SDI, Video
Power Consumption	≤18W
Operating Temperature	-20°C~60°C
Storage Temperature	-30°C~70°C
Dimension (LWD)	482.5x133.5x25.3mm
Weight	2885g

## 6. TROUBLE SHOOTING

### 1. Only black-and-white display:

Check whether the color saturation is properly set up or not.

### 2. Power on but no pictures:

Check whether the cables of HDMI, YPbPr, SDI and VIDEO are correctly connected or not. Please use the standard power adapter equipped with the product package. Improper power input may cause damage.

### 3. Wrong or abnormal colors:

Check whether the cables are correctly and tightly connected or not. Broken or loose pins of the cables may cause a bad connection.

### 4. When power on, the picture shows size error:

Press "**MENU** → **DISPLAY** → **Underscan**" to zoom in/out pictures automatically when receiving HDMI signals.

### 5. Other problems:

Please press "MENU" button and choose "**SYSTEM**→ **Manufacturer Default** →**ON**", then press "ENTER" button to confirm it.

**6. According to the ISP, the machine can not function properly:**

ISP is used for program upgrades, non-professionals do not use. The device will reboot if selected accidentally!

**Note: due to constant effort to improve products and product features, specifications may change without prior notice.**

